For an optimal audio performance, your ear must be blocked by the eartip without any leakage.

Select the size that provide you the best comfort and fit.

We recommand to try all three sizes and be aware you may need a different size for each ear.





WEAR YOUR IEM
















1. Reduce the volume

- 2. Wear your IEM 3. Increase the volume
- 4. Enjoy your music

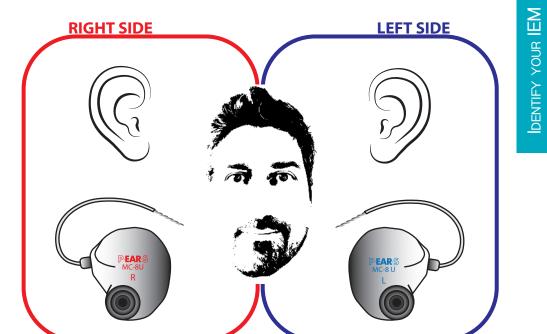

Rediscover your sound MC-8U

wbesizendio #rediscoveryoursound


Obearsaudio avare your experience




User Guide



Extend the life and reliability of your monitors by cleaning after every use. No need to disconnect the audio cable.

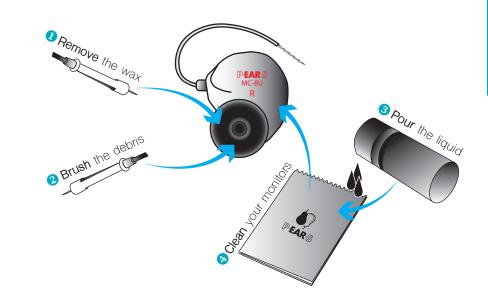

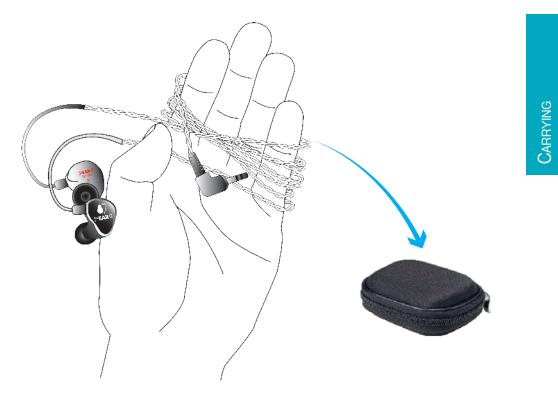

MC-8U

Accessories

Internal Speaker Configuration						
Single moving coil Driver						
Frequency Response						
10Hz — 16kHz						
Input Sensitivity				-•		
109dB @ 1kHz, 1mW						
Impedance						
16 Ohms						
Noise Isolation	SUB	BASS	LOW	MID	HIGH	TREBLE
-23dB of ambient stage noise			MID		MID	